

DSC Neo Quick Reference

The PowerSeries Neo Alarm System uses shortcut keys to access options or features on all models of keypads. When using an LCD keypad, the PowerSeries Neo Alarm System additionally uses a menu based navigation system. The scroll keys can be used to [Scroll] through the list of options contained within the current menu.

Status Lights		Function Keys	Emergency Keys
	Ready - Indicates system normal. Must be on to arm system. All zones must be secured or bypassed and the system disarmed for this light to activate.	Stay Arm	Fire Alarm
	Armed - Indicates system is armed. If the Ready light and the Armed light are both on it indicates an Exit Delay is in progress.	Away Arm	Medical Alarm
	Trouble - On indicates a system malfunction or tamper. Flashing indicates that the keypad has a low battery condition. Follow the instructions displayed or enter [*][2] to view trouble. Correcting the trouble turns off the indicator.	Chime	Panic Alarm
	AC Power - Indicates AC Power is present. The AC Power light will turn off when AC is absent.	Reset Sensors	
Action	Press		
Arming and Disarming			
Away Arm	for 4 seconds		
Stay Arm	for 4 seconds		
Disarm	[Access Code]		
Abort Arming Sequence	[Access Code]		
Bypassing - All bypass commands begin with			
Bypass Individual Zones	[3 Digit Zone #]		
Bypass All Open Zones			
Recall Last Bypass			
Clear Bypass	OR [Scroll] Bypass Options + + [Scroll] Clear Bypasses +		
Common Functions			
Set Time and Date	[Master Code] +		
Turn Chime ON/OFF	OR		
Change Brightness	[Master Code] + +		
Change Contrast	[Master Code] + +		
Add/delete User	+ [Master Code] + [Access Code] +		
Reset Smoke Detectors	OR		
View Troubles	+		
View Alarms	+		
Perform System Test	[Master Code] + +		
Buzzer Volume	[Master Code] + +		